



Panasonic

Digital Cordless Phone

Model No. **KX-TCD952EB**

Operating Instructions



**PLEASE READ BEFORE USE
AND SAVE.**

Caller ID Compatible

Charge the batteries for about 4 hours before initial use.

This equipment is not designed for making emergency telephony calls when the power fails. Alternative arrangements should be made for access to emergency services.

Important Information

Do not connect the AC adaptor to any AC outlet other than the standard AC 230–240 V, 50 Hz.

- Outlet voltage DC1 8 V, 300 mA
Outlet voltage DC2 9 V, 200 mA
- The apparatus is approved for use with the KX-TCA9E or KX-TCA11E power supply.
- CAUTION: Do not remove cover. Live parts inside.

This apparatus may make use of the following facilities:

- 1) Storage of telephone numbers for retrieval by a predetermined code
- 2) Last number redial
- 3) Simple telephone facility
- 4) PBX earth register recall (option)
PBX timed break register recall
- 5) MF signalling
- 6) LD signalling
- 7) Pause
- 8) 1 way paging
- 9) Call prohibition
- 10) Call restriction
- 11) Direct call
- 12) Intercom between handsets
- 13) Transferring a call from one handset to another
- 14) Conference
- 15) Setting the call waiting tone
- 16) Accessing the base unit
- 17) Caller ID Service compatible

Any other usage may result in misoperation.

Ringer Equivalence Number (REN):

This relates to the performance of the apparatus when used in combination with other items of apparatus. It enables the calculation of the maximum number of items of apparatus that may be connected simultaneously to the line by summing the REN values of each item. A BT supplied instrument has a REN value of 1 unless otherwise marked.

A maximum REN value of 4 should not be exceeded. The REN value of this apparatus is 1.

Method of connection

This is connected to the exchange line or PABX/PMBX (Private Automatic/Manual Branch Exchange) extension by the new standard British Telecom plug and socket. Arrangements for provision of this type of termination can be made through the nearest British Telecom Sales Office. The apparatus may be connected to the following types of installation. The apparatus has been approved for use under the following conditions:

- a) This apparatus may be used on telecommunication systems employing LD and MF signalling. It is intended for connection to a direct exchange line on the PSTN (Public Switched Telephone Network) or via a compatible PBX (Private Branch Exchange). (Contact the supplier for an up to date list of compatible PBX's.)
- b) This apparatus is not suitable as an extension to a payphone or for use on a party line with shared service.

This cordless telephone has been designed to operate on radio frequencies which have been assigned to the exclusive use of cordless telephones. As the use of cordless telephones becomes more widespread users may experience a reduction in the quality of service obtainable from this apparatus.

Although this equipment can use either loop disconnected or DTMF signalling, only the performance of the DTMF signalling is subject to regulatory requirements for correct operation. It is therefore strongly recommended that the equipment is set to use DTMF signalling for access to public or private emergency services. DTMF signalling also provides faster call set up.

999 or 112 can be dialled on the apparatus for the purposes of making outgoing calls to the BT Emergency (999 or 112) Service.

WARNING:

The apparatus may be unable to make emergency 999 or 112 telephone calls, under certain conditions, e.g.

- Radio interference caused by another cordless telephone operating on the same radio frequency.
- The portable handset battery needs recharging, or has failed.
- The portable handset cannot be used while charging.

Any cases of difficulty should be referred in the first instance to the supplier of the apparatus.

NOTE:

If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still gives problems, then please contact the customer service department of your PSTN operator. If it operates properly, then the problem is likely to be a fault in your apparatus. In this case, contact your supplier for advice. Your PSTN operator may charge you if they attend a service call that is not due to apparatus supplied by them.

Before Initial Use

Thank you for purchasing your new Panasonic digital cordless telephone.

If you require assistance please contact our customer care helpline on Tel. No. : 08701 578577





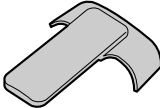

Caller ID, where available, is a telephone company service. After subscribing to Caller ID, this phone will display the caller's phone number. A second caller's phone number displays while the user is on another call, requires a subscription to both Caller ID and Call Waiting.

For your future reference

Serial No. _____ Date of purchase _____
(found on the bottom of the unit)

Name and address of dealer _____

Included with this unit
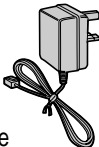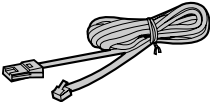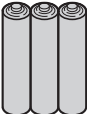
<input type="checkbox"/> AC Adaptor (p. 10) Part No. KX-TCA9E or KX-TCA11E  one	<input type="checkbox"/> Telephone Line Cord (p. 10) Part No. PQJA87S  one	<input type="checkbox"/> Batteries (p. 9) Part No. Panasonic P-03H (BYD PQP25AAA)  three
<input type="checkbox"/> Handset Cover (p. 9) Part No. PQKK10091Z1  one	<input type="checkbox"/> Belt Clip (p. 44) Part No. PQKE10071Z1  one	<input type="checkbox"/> Operating Instructions Part No. PQQX12707Z  one

Optional accessories


Please contact your nearest Panasonic dealer for the following options.

Model No.	Description
KX-A102EB	Handset
KX-TCA110EB	Charger
HHR-P03H	Ni-MH batteries

For Best Performance

Battery Charge

Rechargeable Ni-Cd batteries power the handset. Install the batteries (p. 9) and charge them for about **4 hours** before initial use (p. 11).

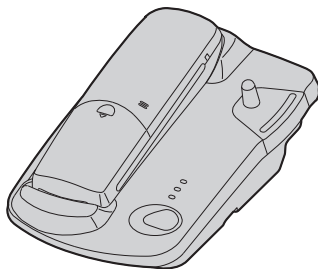


Base Unit Location

Calls are transmitted between the base unit and the handset using wireless radio waves. **For maximum distance and noise-free operation**, the recommended base unit location is:

Away from electrical appliances such as a TV, radio, personal computer or another telephone.

In a **HIGH** and **CENTRAL** location with no obstructions such as walls.

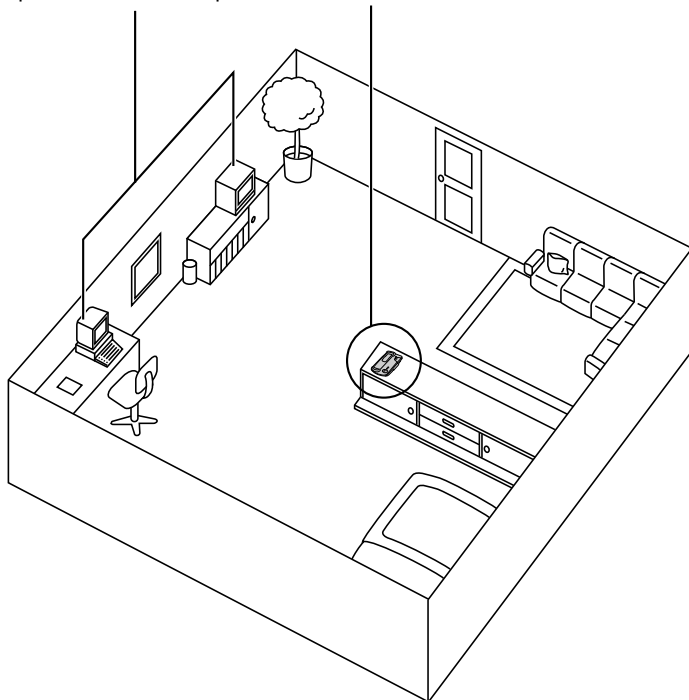

Contents

Chapter 1 Preparation

Location of Controls	8
Display	9
Settings	9
Installing the Batteries in the Handset	9
Connections	10
Battery Charge.....	11
Turning the Power ON.....	12
Selecting the Dialling Mode.....	13
Selecting the Handset Ringer Volume/Pattern	14
Selecting the Base Unit Ringer Volume.....	15
Setting the Auto Talk Feature	15

Chapter 2 Basic Operations

Making Calls	16
Answering Calls	17
Caller ID Service	18
Using the Caller List	19
Viewing the Caller List	19
Calling Back from the Caller List ..	20
Editing the Caller's Phone Number	20
Clearing a Caller's Phone Number in the Caller List	21
Speed Dialling	22
Storing Phone Numbers in Memory	22
Dialling a Stored Number	22

Special Features23

How to Use the Pause Feature (For Analog PBX Line/Long Distance Service Users)	23
Handset Locator	23
Temporary Tone Dialling (For Rotary or Pulse Service Users) ...	24
Setting the Key Lock	24
Call Waiting and Caller ID Compatible	24
Using the Recall Feature.....	25

Chapter 3 Advanced Operations (Special Programming Features)

Summary of Programmable Functions.....	26
Setting the Password	27
Direct Call	28
Setting the Direct Call Mode	28
Dialling the Stored Number	28
Call Prohibition	29
Call Restriction	30
Other Programmable Settings.....	31
Setting the Key Tones	31
Setting the Range Warning Alarm	31
Setting the Battery Low Alarm.....	31
Selecting the Talk Mode Display ..	32
Clearing the Settings in Memory	33

Chapter 4

Multi-Unit User Operations

For Optional Multi-Unit Users.....34

- Operating More than One
Handset34
- Operating More than One Base
Unit34

Registration35

- Registering a Handset in the
Base Unit35
- Selecting the Base Unit Access ...36
- Cancelling a Handset37

Selecting the Stand-by Mode

Display38

Bell Selection38

Paging/Intercom.....40

- Paging All Handsets from
the Base Unit40
- Intercom between Handsets.....40
- Transferring a Call from One
Handset to Another.....41
- Conference42
- Setting the Call Waiting Tone42

Chapter 5

Useful Information

Replacing the Batteries.....43

Using the Belt Clip44

Before Requesting Help45

Safety Instructions48


Adding Another Phone.....49

Important Notice Concerning the Correct Use and Charging of Ni-Cd (Ni-MH) Batteries49


Term Definitions.....50

Location of Controls


Base unit

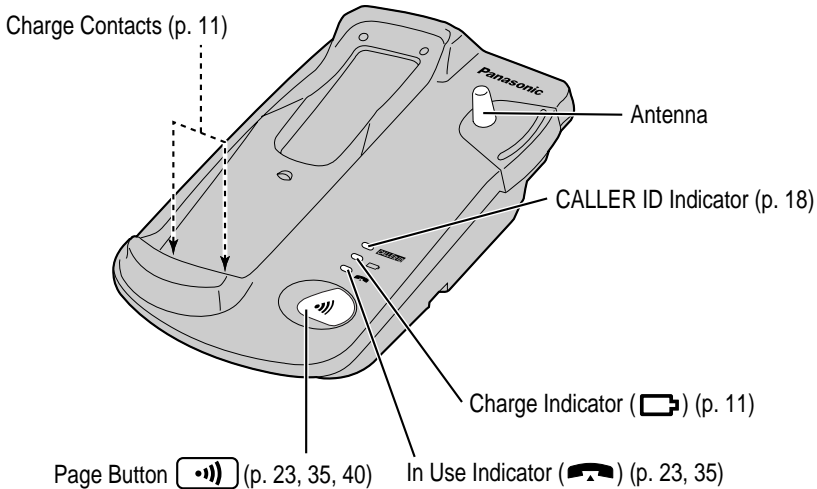

Handset

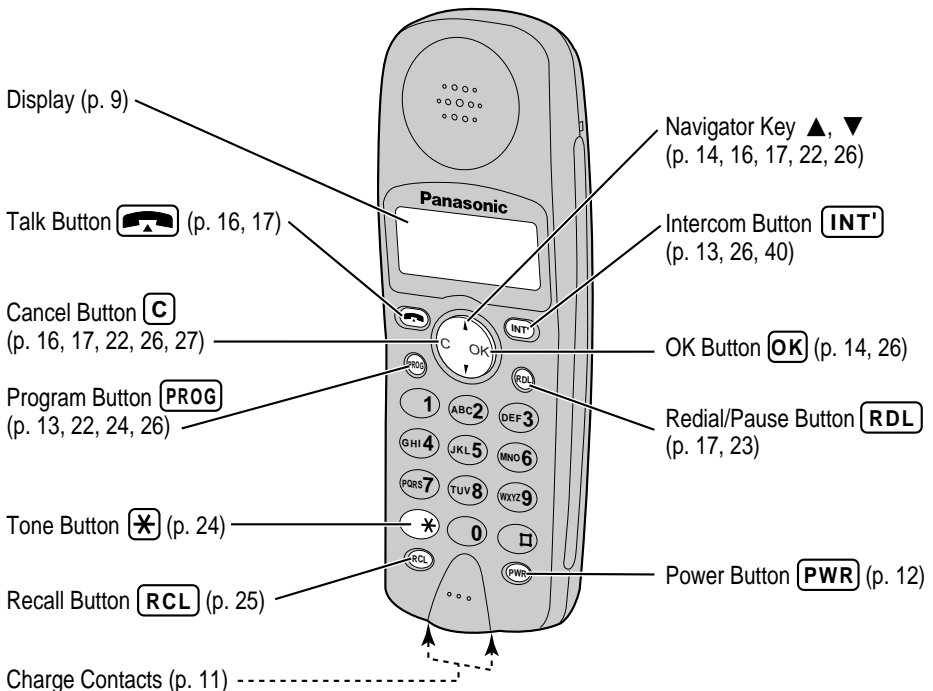

Display

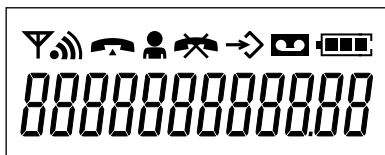

(The display shows all possible configurations.)

Icons



The in range icon indicates that the handset is in range of the base unit. It flashes when the handset is out of range.



The page/intercom icon is displayed when paging or using the intercom. It flashes when another unit pages the handset.



The talk icon is displayed when making or answering calls. It flashes when an outside call is being received.



The direct call icon is displayed when this mode is turned on (p. 28).



The call prohibition icon is displayed when this mode is turned on (p. 29).



The program icon indicates that the unit is in the programming mode.



The battery icon indicates the battery strength (p. 11).

Characters



RDL is pressed while dialling.



***** is pressed while dialling.



RCL is pressed while dialling.




☐ is pressed while dialling.

Settings



Installing the Batteries in the Handset

Install the batteries as shown. Then install the handset cover.

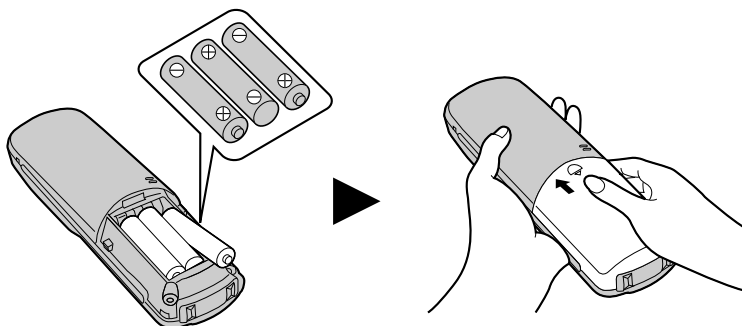


• If the rechargeable batteries are not inserted correctly, the handset will not work.

➡ Settings

Connections

Plug in the AC adaptor and the telephone line cord to the bottom of the unit. Then connect the cords as shown.

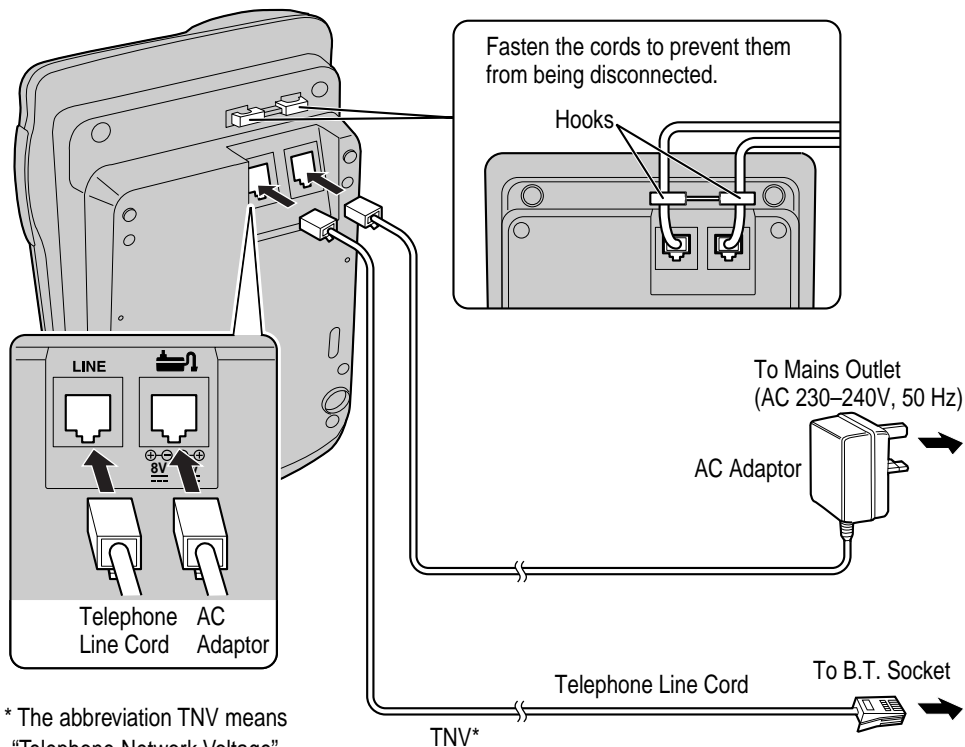

* The abbreviation TNV means "Telephone Network Voltage".

- **USE ONLY WITH Panasonic AC ADAPTOR KX-TCA9E OR KX-TCA11E.**
- Be careful not to confuse the telephone line jack with the AC adaptor jack on the base unit. If connected improperly, the base unit will not work and damage may occur.
- The AC adaptor must remain connected at all times. (It is normal for the adaptor to feel warm during use.)
- To connect a standard telephone on the same line, see page 49.
- If your unit is connected to a PBX which does not support Caller ID services, you cannot access those services.


CONNECTION OF POWER SUPPLY

This apparatus is intended for use when powered by the KX-TCA9E or KX-TCA11E. Using other power supplies will invalidate any approval given to this apparatus.

Battery Charge



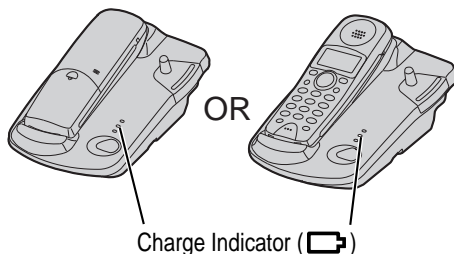

At the time of shipment, the batteries are not charged. To charge, place the handset on the base unit. Please charge the batteries for about **4 hours** before initial use.

- The charge indicator () lights.




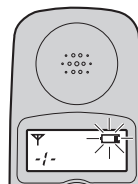
Battery strength

You can check the present battery strength on the display.

Battery strength	Fully charged	Medium	Low	No power
Battery icon				 (Flashing)

Recharge


When “  ” flashes or the unit beeps every 15 seconds, recharge the batteries.



Battery information

After your Panasonic batteries are fully charged:

Operation	Approx. Ni-Cd battery life (included)	Approx. Ni-MH battery life (option)*
While in use (Talk)	Up to about 6 hours	Up to about 12 hours
While not in use (Stand-By)	Up to about 65 hours	Up to about 130 hours


- Battery life may vary depending on usage conditions, such as:
 - when viewing the Caller ID Caller List, and
 - ambient temperature.
- **Clean the handset and the base unit charge contacts with a soft, dry cloth once a month.**
Clean more often if the unit is subject to grease, dust or high humidity. Otherwise the batteries may not charge properly.
- If the batteries are fully charged, you do not have to place the handset on the base unit until “  ” flashes. This will maximise the battery life.
- The batteries cannot be overcharged.

* Nickel metal hydride (Ni-MH) rechargeable batteries (AAA size) are available.

When you replace the batteries, you must program the battery type selection (see page 43).


- Read “Important Notice Concerning the Correct Use and Charging of Ni-Cd (Ni-MH) Batteries” on page 49.

Turning the Power ON

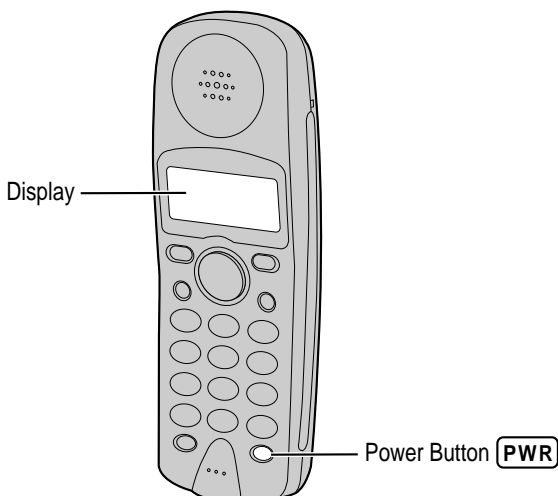

Press **PWR** firmly.

 - After all possible configurations briefly appear, the display will change to the following. Then the handset is in the stand-by mode. The current connected base unit number is displayed.



- You can choose whether to display the base unit number, handset number or no display in the stand-by mode by programming (p. 38).

To turn the power OFF, press and hold **PWR** until a beep sounds.

- The display will go blank.
- The handset will not ring.
- Depending on the programming mode, you may not be able to turn the power off. First make sure the handset is set to the stand-by mode.

 


Selecting the Dialling Mode


You can program the dialling mode to tone or pulse. If you have touch tone service, set to tone. If rotary or pulse service is used, set to pulse. The factory preset is tone.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

- 1 Press **PROG** then **INT'**.



- 2 Press **3**.

 


- 3 Enter the base unit password.

- The factory preset is 0000. To change the base unit password, see page 27.

- 4 Press **1**.

 - The current mode is displayed.
1: Tone 2: Pulse
Ex. Tone is selected.



- 5 To select Pulse, press **2**.

OR


To select Tone, press **1**.

- 6 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.

- If 5 beeps sound in step 3, the entered password is incorrect. Enter the correct password.
- To cancel during programming, press **PROG**, then start from step 1.

You can determine which type of local BT exchange you are connected to using the following procedure.

- 1 Ensure that the dialling mode is selected tone.
- 2 Press , then identify the dial tone.
- 3 Dial a number you are familiar with.
- 4 If the call is successful, you are connected to a tone exchange. Therefore, leave the dialling mode as tone.
- 5 If the call is not successful, you are connected to pulse exchange. Therefore, set the dialling mode to pulse.

Selecting the Handset Ringer Volume/Pattern

 
You can program the desired handset ringer volume and pattern.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

Ringer volume

7 levels are available. The lowest level is 1. The highest level is 6. The factory preset is 3. When set to OFF, the handset will not ring.


- 1 Press **PROG**.



- 2 Press ▼ or ▲ until "F22" is displayed.

- 3 Press **OK**.

 - The current volume is displayed and rings.
Ex. Level 3 is selected.



- 4 Press ▼ or ▲ to select the desired level.

- Each time you press a button, the selected volume is displayed and rings.
- To set to OFF, erase "0" by pressing ▼ until "bELL OFF" is displayed.

- 5 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.
- When set to OFF, "bELL OFF" will be displayed.

Ringer pattern

You can program the desired handset ringer pattern (6 patterns). The factory preset is pattern 1.

 
- 1 Press **PROG**.

- 2 Press ▼ or ▲ until "F23" is displayed.

- 3 Press **OK**.

- The current ringer pattern is displayed and rings.

Ex. Pattern 1 is selected.



- 4 Press ▼ or ▲ to select the desired pattern.

- You can press **1** to **6** to select the pattern.
- Each time you press a button, the selected pattern will be displayed and sound.

- 5 Press **PROG**.

 
- A confirmation tone sounds and the display will return to the stand-by mode.

Selecting the Base Unit Ringer Volume

4 levels (HIGH, MEDIUM, LOW, OFF) are available. The factory preset is MEDIUM. When set to OFF, the base unit will not ring.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.


- 1 Press **PROG** then **INT'**.



- 2 Press **2** TWICE.

- The current volume is displayed.
1: LOW 2: MEDIUM 3: HIGH
0: OFF

 Ex. MEDIUM is selected.



- 3 Press the desired volume level **1**, **2**, **3** or **0**.

- Each time you press a button, the selected volume is displayed and rings.

- 4 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.

Setting the Auto Talk Feature

The Auto Talk feature allows you to answer a call by lifting the handset off the base unit without pressing . If you want to use this feature, turn the feature ON. The factory preset is OFF. In order to view caller's phone number before answering a call, leave the Auto Talk feature OFF.

 
Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

- 1 Press **PROG**.

- 2 Press **▼** or **▲** until "**F28**" is displayed.

- 3 Press **OK**.

- The current setting is displayed.
0: OFF (factory preset) 1: ON
Ex. OFF is selected.



- 4 Press **▼** or **▲** to select the desired setting.

- You can press **0** to **1** to select the setting.

- 5 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.

 
Making Calls

Make sure that the power is ON (p. 12).


1 Press .


2 Dial a phone number.

- The dialed number is displayed.



 - After a few seconds, the display will start showing the length of the call.





3 To hang up, press  or place the handset on the base unit.

- The handset will return to the stand-by mode.


To dial after confirming the entered number

1 Enter a phone number.



- The entered number is displayed.
- If you misdial, press . Digits are erased from the right.
- To cancel, press  firmly.

2 Press .

- After a few seconds, the display will start showing the length of the call.

3 To hang up, press  or place the handset on the base unit.

- The handset will return to the stand-by mode.

 
- If “” flashes and an alarm tone sounds after pressing , move closer to the base unit. Then try again.
- You can choose whether to display the length of the call or phone number in the talk mode by programming (p. 32).

To select the receiver volume

3 levels (HIGH, MEDIUM, LOW) are available. The factory preset is MEDIUM.

While talking, press  or  to select the desired level.

Ex. LOW is selected.






- After a few seconds, the display will return to the length of call.

OR

 
In the stand-by mode, proceed as follows.

1 Press .

2 Press  or  until “F6” is displayed, then press .

- The current level is displayed.

Ex. LOW is selected.



3 Press  or  to select the desired level.

4 Press .

To redial the last number dialled

Press  → **RDL**.

- The last number dialled is automatically redialled.

To redial after confirming the numbers in redial memory

The unit automatically stores the last 10 numbers dialled into redial memory.


1 Press **RDL**.

- The last number dialled is displayed.

2 Select the desired number by pressing **RDL**.

- You can also search from the most recent to oldest number by pressing ▼. To search from the oldest to most recent number, press ▲.
- “////////” denotes the end of redial memory.
- To exit the list, press **C** firmly.

3 Press .

- The number is dialled automatically.
- If your line has rotary or pulse service, any access numbers entered after pressing  will not be included when redialling.

To clear all of the numbers in the redial memory

1 Press **PROG**.

2 Press ▼ or ▲ until “F4” is displayed, then press **OK**.



3 Press **PROG**.

Answering Calls


Make sure that the power is ON (p. 12), otherwise the handset will not ring.

If the handset is off the base unit, press



- You can also answer a call by pressing any dialling button **0** to **9**,  or  (—Any Key Talk).

Auto talk

 
If you set the Auto Talk feature to ON (p. 15), you can answer a call by lifting the handset off the base unit without pressing .

- The handset and base unit will not ring if both ringer volumes are set to OFF (p. 14, 15).

To turn the handset ringer off temporarily

When the handset starts ringing, press ▼ firmly.

- “**BELL OFF**” is displayed and the handset stops ringing.



- The ringer will turn back on for the next call.
- This function will not work when the handset is on the base unit.

Caller ID Service

This unit is compatible with a Caller ID service offered by your telephone company. After subscribing to a Caller ID service, the calling party's phone number will be displayed after the first ring.

 
The unit can record the phone numbers of up to 50 different callers in the Caller List. Using this list, you can automatically call back a caller.

If you subscribe to a Caller ID and Call Waiting service, when a second call is received while talking, the new caller's phone number will be displayed (p. 24).

- You can not access the Caller ID service while using the handset and base unit internal call.

How caller information is displayed when a call is received

The display shows the caller's phone number after the first ring.




- After you answer the call, the display will show the length of the call.
- Caller's phone number cannot be displayed in the following cases:
 - If the caller dialed from an area which does not provide a Caller ID service, the display will show "////////".
 - If the caller has requested not to display his/her phone number, the display will show "00000000".

- If your unit is connected to a PBX which does not support Caller ID service, you cannot access those services.

Checking the number of new calls

When new calls have been received, the caller ID indicator flashes on the base unit. In the stand-by mode, the display shows the number of new calls.

 - For example, if you have received 10 new calls, the display will show the following.



Using the Caller List



 
Viewing the Caller List

Telephone numbers of up to 50 different callers are stored from the most recent to the oldest call in the Caller List. When the 51st call is received, the oldest call is deleted.

To check the caller's phone number, follow the steps below.


Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

- 1 Press **PROG** then **INT'**.



- 2 Press **▼** or **▲**.

 - The most recent caller's phone number is displayed.



- 3 To search from the most recent to oldest call, press **▼** repeatedly.

To search from the oldest to most recent call, press **▲** repeatedly.

- To scroll between callers, press **▼** or **▲**.

 
- 4 To exit the list, press **C**.

- The handset will return to the stand-by mode.
- If no number is displayed in step 2, the Caller List is empty. The display will return to the stand-by mode.

- If more than one call is received from the same caller, only the most recent call will be recorded.

What "☎" means:


When you have checked new calls, answered the call or called back the caller, "☎" will be added to the caller's number.



- When the same caller calls again, the call entry with "☎" will be deleted and replaced with the new call entry.

When viewing long telephone numbers:

 If the caller's number is greater than 12 digits the whole telephone number will not be shown. Press **3** to see the remaining numbers.





Press **3**.



➡ Using the Caller List


Calling Back from the Caller List

 
- 1 Press **PROG** then **INT'**.
 - 2 Press **▲** or **▼**.
 - The most recent caller's information is displayed.
 - 3 Press **▼** or **▲** until the desired caller number is displayed.
 - 4 Press .
 - The displayed phone number is dialed automatically.
 - 5 To hang up, press  or place the handset on the base unit.
 - The handset will return to the stand-by mode.
- If a phone number is not displayed in the caller information, you cannot call back that caller.

Editing the Caller's Phone Number

You can edit a phone number in the Caller List. After editing the number, you can continue with the calling back procedure.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

- 1 Press **PROG** then **INT'**.
- 2 Press **▲** or **▼**.
 - The most recent caller's phone number is displayed.
- 3 Press **▼** or **▲** until the desired number is displayed, and press **OK**.
 - The first digit flashes.
- 4 Add a number to the current number.
 - Pressing **C** erases the digit to the left of flashing digit.
 - To erase all digits, press and hold **C**.
- 5 To call the number, press .



Clearing a Caller's Phone Number in the Caller List

You can clear caller's phone numbers in the Caller List.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

- 1 Press **PROG** then **INT'**.
- 2 Press **▲** or **▼**.
 - The most recent caller's phone number is displayed.
- 3 Press **▼** or **▲** until the caller phone number you want to clear is displayed.
- 4 Press **PROG**.
- 5 Press and hold **C**.
 - A confirmation tone sounds.
 - The displayed number is cleared and the next caller's phone number is displayed.

Speed Dialling

Storing Phone Numbers in Memory

You can store up to 20 telephone numbers in the handset.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

 
- 1 Press ▼ or ▲ until a desired memory station number (00 to 19) is displayed.

- You can enter the desired memory station number after pressing ▼ or ▲.



- 2 Press **PROG**.

- 3 Enter a phone number, up to 24 digits.



- If you misdial, press **C**. Digits are erased from the right. To erase all digits, press **C** firmly.

- 4 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.
- To store other numbers, repeat steps 1 through 4.

- If a pause is required for dialling, press

RDL where needed. Pressing **RDL**

counts as one digit (p. 23).

- To cancel during programming, press **PROG**, then start from step 1.

Memory card

Use the memory card on page 47 as a name or phone number index for speed dialling. Cut out the card and attach it in a convenient place.

To erase a stored number

- 1 Press ▼ or ▲ until the desired phone number is displayed.

- You can enter the desired memory station number (00 to 19) after pressing ▼ or ▲.

- 2 Press **PROG**.

- 3 Press **C**.

- 4 Press **PROG**.

Dialling a Stored Number

- 1 Press ▼ or ▲ until the desired phone number is displayed.

- You can enter the desired memory station number (00 to 19) after pressing ▼ or ▲.
- To exit the speed dialler memory, press **C**.

- 2 Press .

- The number is automatically dialled.

Special Features



How to Use the Pause Feature

(For Analog PBX Line/Long Distance Service Users)

We recommend you press **[RDL]** if a pause is required for dialling with a PBX or to access a long distance service.

Ex: Line access number **[9]** (PBX)

[9] ➡ **[RDL]** ➡ Phone number

- Pressing **[RDL]** once creates a pause.
This prevents misdialling when you redial or dial a stored number.
- Pressing **[RDL]** more than once increases the length of the pause between numbers.

Setting the pause timing

You can set the pause timing to 3 seconds or 5 seconds, depending on your PBX requirements. The factory preset is 3 seconds.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

1 Press **[PROG]** then **[INT']**.

 
2 Press **[3]**.

3 Enter the base unit password (p. 27).

- The factory preset is 0000.

4 Press **[3]**.

- The current timing is displayed.
1: 3 seconds 2: 5 seconds
Ex. 3 seconds is selected.



5 To select 5 seconds, press **[2]**.
OR

To select 3 seconds, press **[1]**.

6 Press **[PROG]**.

- A confirmation tone sounds and the display will return to the stand-by mode.

- If 5 beeps sound in step 3, the entered password is incorrect. Enter the correct password.

Handset Locator

From the base unit, you can locate the handset or page a person at the handset with ring tones.

1 Press **[📞]**.

- The in use indicator () flashes on the base unit.
- The handset rings for 1 minute and "📶" flashes.
- The base unit is displayed as "[0]".

Handset 1 display



2 To stop paging, press **[📞]** again or press **[📞]** on the handset.

➡ Special Features

Temporary Tone Dialling (For Rotary or Pulse Service Users)

 
Press **[✳]** before entering access numbers which require tone dialling.

- The dialling mode changes to tone. You can enter numbers to access an answering service, electronic banking service, etc. When you hang up, the mode will return to pulse.

Setting the Key Lock

You can lock the handset dialling buttons. Only incoming calls are accepted until the key lock is cancelled.

When the unit is in the stand-by mode, press and hold **[PROG]** until a beep sounds.



- “**LOCKED**” is displayed and all dialling buttons are locked.

To cancel the key lock

When the unit is in the stand-by mode, press and hold **[PROG]** for about 2 seconds.

- “**LOCKED**” will disappear and the key lock will be cancelled.
- The key lock will also be cancelled when the power is turned OFF (p. 12).
- When the handset is in “Key lock” mode emergency calls can not be made until the key lock is cancelled.

Call Waiting and Caller ID Compatible

If you subscribe to Caller ID and Call Waiting service, your handset displays a second caller's information while talking. After you hear a second caller waiting tone, the caller's phone number will be displayed.

You can answer the second call, keeping the first call on hold.

- Please consult your telephone company for details and available in your area.

Using the Recall Feature

RCL is used to access special telephone services (optional) such as call waiting. Contact your telephone company business office for details.

Example: British Telecom call waiting



When a call waiting tone is heard during a conversation:

a) To hold the existing call and accept the waiting call

Press **RCL**.

- Each time you press **RCL**, you can switch between the first and second call.
- Depending on the provider, you may need to enter a code after pressing **RCL**. Follow the instructions given by your provider.

b) To accept the waiting call and hang up the existing call

Press . When the unit rings, press  to answer the new call.

c) To reject the waiting call

Wait for the call waiting to time out. This will take about 40 seconds.

If your unit is connected to a PBX, pressing **RCL** allows you to access some features of your host PBX such as transferring an extension call.

Selecting the earth (option)/time break recall mode

The earth relay can be installed as an option depending on your PBX requirements. Please consult your nearest Panasonic Service Centre for installation. Then you can select the time break recall or earth mode. The factory preset is time break recall.

Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

1 Press **PROG** then **INT'**.

2 Press **3**.

3 Enter the base unit password (p. 27).

 
- The factory preset is 0000.

4 Press **2**.

- The current mode is displayed.

1: Time break recall 2: Earth

Ex. Time break recall is selected.



5 To select "Earth", press **2**.

OR

To select "Time break recall", press **1** then **2**.

6 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.
- If 5 beeps sound in step 3, the entered password is incorrect. Enter the correct password.

Summary of Programmable Functions

You can program the following function items using the handset near the base unit. See the corresponding pages for function details.

 
Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.

<Stand-by mode>



Press **PROG**.

Press **PROG** then **INT'**.



Press **▼** or **▲** until a desired function code is displayed, then press **OK**.

Code	Function item
F1	To select the base unit access (p. 36)
F21	To set the key tone (p. 31)
F22	To select the handset ringer volume (p. 14)
F23	To select the handset ringer pattern (p. 14)
F24	To set the call waiting tone (p. 42)
F25	To set the range warning alarm (p. 31)
F26	To set the battery low alarm (p. 31)
F28	To set the auto talk feature (p. 15)
F31	To select the stand-by mode display (p. 38)
F32	To select the talk mode display (p. 32)
F33	To select the battery type (p. 43)
F41	To set the call prohibition mode (p. 29)
F42	To set the direct call number (p. 28)
F5	To set the handset password (p. 27)
F6	To select the receiver volume (p. 16)
F70	To cancel the base unit (p. 37)
F71	To register to the base unit (p. 35)
F9	To clear the redial memory (p. 17)
F0	To clear the handset settings (p. 33)

Enter a desired function command as shown below.

Command	Function item	Command	Function item
1	To set the bell selection (p. 38)	5	To set the base unit password (p. 27)
2	To select the base unit ringer volume (p. 15)	6	To set the call restricted handset(s) and restriction number(s) (p. 30)
3	To select the dialling mode (p. 13) To select the pause time (p. 23) To select the earth/time break recall mode (p. 25)	7	To cancel a handset (p. 37)
		0	To clear the base unit settings (p. 33)

- To cancel during programming, press **PROG**, then start from the beginning.
- To return to the previous step during programming, press **C**.

Setting the Password

 
You can program a 4-digit password for both the handset and base unit individually. Each factory preset is 0000. Changing the password may prevent the unauthorised use of your unit by another person.

Once you have programmed the password, you cannot confirm it. We recommend you write down the password. If you forget it, please consult your nearest Panasonic Service Centre.


On the handset

You need to enter the password when using the functions, such as “Setting the call prohibition” (p. 29), “Clearing the settings in handset memory” (p. 33) and “Cancelling a base unit” (p. 37).

- 1 Press **PROG**.
- 2 Press **▼** or **▲** until “F5” is displayed, then press **OK**.



 - 3 Enter the current handset password.
 - The factory preset is 0000.
- 4 Enter the new 4-digit password TWICE.




- If you misdial, press **C**. Digits are erased from the right.
 - A confirmation tone sounds and the display will return to the stand-by mode.
-
- If 5 beeps sound in step 3, the entered password is incorrect. Enter the correct password.


On the base unit

You need to enter the password when using the functions, such as “Setting the dialling mode” (p. 13), “Setting the pause timing” (p. 23), “Setting the earth/time break recall mode” (p. 25), “Setting the call restriction” (p. 30), “Clearing the settings of the base unit memory” (p. 33), “Registering a handset in the base unit” (p. 35), “Cancelling a handset” (p. 37) and “Setting the bell selection” (p. 38).

 - 1 Press **PROG** then **INT**.
- 2 Press **5**.



 
- 3 Enter the current base unit password.
 - The factory preset is 0000.



- 4 Enter the new 4-digit password TWICE.
 - A confirmation tone sounds and the display will return to the stand-by mode.

 
Direct Call

You can store a number in the direct call memory. This feature allows you to make a call easily by pressing . Incoming calls are accepted.

Setting the Direct Call Mode


After storing the direct call number, the unit will automatically switch to the direct call mode. When the direct call mode is on, you can ONLY dial the number stored in the direct call memory.

- 1 Press **PROG**.
- 2 Press ▼ or ▲ until “F42” is displayed.
- 3 Press **OK**.



- If the current stored number is the same as the number you wish to set, skip to step 5.


- 4 Enter the phone number, up to 24 digits.
 - If you misdial, press **C**. The digits are erased from the right. To erase all digits, press **C** firmly.
- 5 Press **PROG**.

- A confirmation tone sounds.
- The display will return to the stand-by mode, then “” is displayed.



To change the direct call number:
Enter the new direct call number in step 4.

To turn OFF the direct call mode

- 1 Press **PROG**.
- 2 Press ▼ or ▲ until “F42” is displayed.
- 3 Press **OK**.
- 4 Press **PROG**.
 - “” will go out.

Dialling the Stored Number

 
Make sure that “” is displayed, then press .

- The number stored in the direct call memory is dialled automatically.
- When the handset is in “direct call” mode emergency calls can not be made until direct call is cancelled.

Call Prohibition

You can prohibit anyone from making a call with your handset except for emergency calls (999, 112). Incoming calls are accepted. To use this feature, turn on the call prohibition mode by programming. The factory preset is OFF.

- 1 Press **PROG**.
- 2 Press **▼** or **▲** until **"F4 1"** is displayed.
- 3 Press **OK**.




- 4 Enter the handset password (p. 27).


- The current mode is displayed.


1: ON 0: OFF

 Ex. OFF




- 5 Press **▼** or **▲** to select ON.
- You can press **1** to select ON.
- 6 Press **PROG**.

 - A confirmation tone sounds.
- The display will return to the stand-by mode, then **""** is displayed.



To turn OFF the call prohibition mode

Press **▼** or **▲** to select OFF in step 5.

- You can press **0** to select OFF.
- **""** will go out.

If you forget your handset password, please consult your nearest Panasonic Service Centre.

Call Restriction

You can restrict desired handset(s) from dialling selected phone numbers. Phone numbers beginning with the restricted digits cannot be dialled out. For example, if "00" is assigned as the call restriction number, international calls cannot be made.

For selected handset(s), you can assign up to 6 call restriction numbers (up to 8 digits). Set the call restricted handset(s) and the restriction number(s) by programming. The factory preset is OFF.

 
1 Press **PROG** then **INT'**.

2 Press **6**.

3 Enter the base unit password (p. 27).


- The current registered handset number(s) is/are displayed.

Ex. Handset 1, 2, 3, 4, 5 and 6 are registered.



4 Enter the desired handset number(s).

 
- The selected handset number(s) flash(es).
- Ex. Handset 2 and 6 are restricted.



- If you misdial, press the number(s) again.

5 Press **PROG**.

 - "1" is displayed.



6 Enter a call restriction number, up to 8 digits.

- If you misdial, press **C**. The digits are erased from the right. To erase all digits, press **C** firmly.

7 Press **PROG**.

- A confirmation tone sounds.
- "2" is displayed. To continue entering a number, enter the next number, then press **PROG**.

8 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.

When you dial a restricted number,

the call is disconnected, and the dialled number flashes.

Ex. The restricted number is "00".



To cancel the call restricted handset(s)

Follow steps 1 to 3, then enter the handset number(s) you want to cancel. When finished, press **PROG** repeatedly until the handset returns to the stand-by mode.

To cancel the call restriction number(s)

Follow steps 1 to 4, then select the call restriction number you want to cancel by pressing **PROG**. Then press **C**. When finished, press **PROG** repeatedly until the handset returns to the stand-by mode.

Other Programmable Settings



Setting the Key Tones

 
You can choose whether or not the handset keys will sound tones (key tone, confirmation tone, error tone). The factory preset is ON.

- 1 Press **PROG**.
- 2 Press **▼** or **▲** until “F2 1” is displayed, then press **OK**.

- The current setting is displayed.

1: ON 0: OFF

Ex. ON is selected.



- 3 Press **▼** or **▲** to select the desired setting.
 - You can press **0** or **1** to select OFF or ON.
- 4 Press **PROG**.
 - If ON is selected, a confirmation tone sounds. The display will return to the stand-by mode.

Setting the Range Warning Alarm

 
You can choose whether or not the handset will sound a range warning alarm. The factory preset is OFF.

- 1 Press **PROG**.
- 2 Press **▼** or **▲** until “F25” is displayed, then press **OK**.

- The current setting is displayed.

1: ON 0: OFF

Ex. OFF is selected.



- 3 Press **▼** or **▲** to select the desired setting.
 - You can press **1** or **0** to select ON or OFF.
- 4 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.

Setting the Battery Low Alarm

 
You can choose whether or not the handset will sound a battery low alarm. The factory preset is ON.

- 1 Press **PROG**.
- 2 Press **▼** or **▲** until “F26” is displayed, then press **OK**.

- The current setting is displayed.

1: ON 0: OFF

Ex. ON is selected.



- 3 Press **▼** or **▲** to select the desired setting.
 - You can press **0** or **1** to select OFF or ON.
- 4 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.



Other Programmable Settings

Selecting the Talk Mode Display

You can choose whether to display the length of the call or the dialled telephone number while in the talk mode. The factory preset is the length of the call.

 
- 1 Press **PROG**.
- 2 Press **▼** or **▲** until “F32” is displayed, then press **OK**.

- The current setting is displayed.

1: Length of the call

0: Dialled phone number


Ex. Length of the call is selected.




- 3 Press **▼** or **▲** to select to select the desired setting.
 - You can press **0** or **1** to select the setting.
- 4 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.

During a conversation, the display will be as follows.

 Length of the call
(Ex: 1 h., 30 min., 40 sec.)



Dialled phone number
(Ex: 123-456-7890)

 

Clearing the Settings in Memory

This function enables the handset or base unit to clear the following settings at one time. They will return to their initial settings.


On the handset

Function	Initial setting
Base unit access	Automatic base unit access
Key tones	ON
Handset ringer volume	3 (MEDIUM)
Handset ringer pattern	1
Call waiting tone	ON
Range warning alarm	OFF
Battery low alarm	ON
Stand-by mode display	Base unit number
Talk mode display	Length of the call
Call prohibition	OFF
Direct call mode	OFF
Direct call number	Clear
Handset password	0000
Handset receiver volume	MEDIUM
Redial memory	All clear
Auto talk	OFF

1 Press **PROG**.

2 Press **▼** or **▲** until "**FG**" is displayed, then press **OK**.

 3 Enter the handset password (p. 27).



4 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.


On the base unit

Function	Initial setting
Bell selection	All handsets
Dialling mode	Tone
Earth/time break recall	Time break recall
Pause timing	3 seconds
Call restricted handset(s)	All clear
Call restriction number(s)	All clear
Base unit password	0000
Base unit ringer volume	2 (MEDIUM)

1 Press **PROG** then **INT**.

2 Press **0**.

 3 Enter the base unit password (p. 27).



4 Press **PROG**.


- A confirmation tone sounds and the display will return to the stand-by mode.

For Optional Multi-Unit Users

Operating More than One Handset

You can register and operate up to 6 handsets at the base unit. Operating more than one handset allows you to have an internal call while simultaneously conducting an external phone call using another handset.

Ex. 6 optional handsets are added to a base unit. Handset 1 is engaged in an internal call with handset 3. Handset 2 is engaged in an external call.

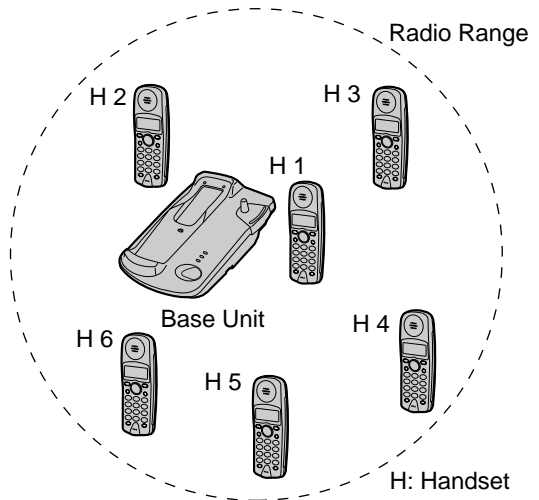


- The optional handset model number is KX-A102EB. The functions of the optional handset are the same as the those of KX-TCD952EB handset.
- An optional charger, KX-TCA110EB, is available from your Panasonic dealer.

Operating More than One Base Unit

You can register and operate your handset at up to 4 base units.

Since each base unit forms a radio cell, you can extend the range or area in which you can make/answer calls with the same handset by placing the base units in suitable locations. For example, you can use a handset in different radio areas, such as at home or the office. However, calls in progress are cancelled when the unit moves to another radio area.

Ex. 3 optional KX-A102EB handsets are added to 2 base units.

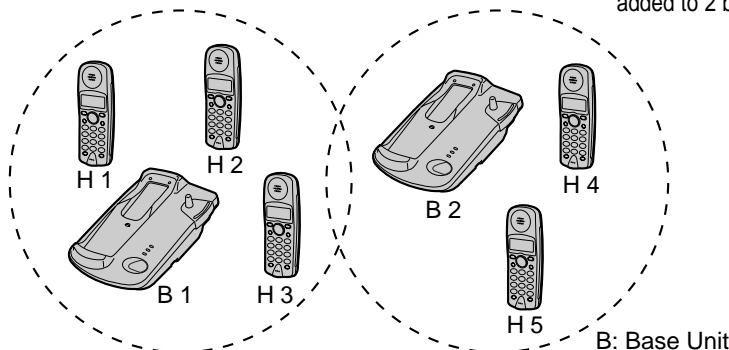



Registering a Handset in the Base Unit

You must register the handset in the base unit before use.

- Charge the optional handset batteries for about 4 hours before initial use.
- Make sure that the power is ON (p. 12) and the unit is in the stand-by mode.
- Register the handset number within 1 minute. If not registered within 1 minute, press **PROG** on the handset to cancel the programming mode. Then start again from step 1.

1 Base unit where handset is to be registered:

Press and hold **[Mute]** on the base unit for more than 10 seconds until the in use indicator () lights and a confirmation tone sounds.

 
2 Handset:

Press **PROG**.

3 Press **▼** or **▲** until "F71" is displayed.


4 Press **OK**.

- The available base unit numbers are displayed.




5 Press the desired base unit number **[1]** to **[4]**.

 - The number is assigned as the base unit number for the handset.
- While the handset is searching for the base unit, "—" flashes across on the display.



6 Enter the base unit password (p. 27).

 

7 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.
- The in use indicator () on the base unit will go out.
- To register the handset in more than one base unit, repeat from step 1 with the other base unit(s).
- The base unit number which the handset is currently in contact with can be displayed in the stand-by mode (p. 38). Calls (both incoming and outgoing) can be conducted only via the displayed base unit (even if the radio areas overlap with neighbouring base units).

Selecting the Base Unit Access

Automatic base unit access

The handset automatically selects a registered base unit.

- When the handset moves to another base unit radio area, it loses contact with the previous base unit and automatically accesses the new base unit.
- If the handset is in the overlap area between several base unit radio areas, the handset will access a base unit in the order of the base unit numbers.

Specified base unit access

You can only select one registered base unit (1 to 4) you want to operate.

- You can choose the base unit/telephone line where you can make/receive calls.

The factory preset is "Automatic base unit access". To select the desired base unit, program as follows.

1 Press **PROG**.

2 Press ▼ or ▲ until "F 1" is displayed.

3 Press **OK**.

 
- The current setting is flashing.

0: Automatic base unit access

1 to 4 (The registered base unit number):

Specified base unit access


Ex. Automatic base unit access is selected.



4 Press ▼ or ▲ to select the desired base unit number (1 to 4).

- You can press the desired base unit number **1** to **4**.
- The selected base unit number flashes.

 Ex. Base unit 1 is selected.




5 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.


Cancelling a Handset

Each handset can cancel itself or another handset.

 - 1 Press **PROG** then **INT'**.
- 2 Press **7**.
- 3 Enter the base unit password (p. 27).
 - The current registered handset number(s) is/are displayed.
Ex. Handset 1, 2, 3, 4, 5 and 6 are registered.



 - 4 Enter the handset number(s) you want to cancel.
 - The selected handset number(s) flash(es).
Ex. Handset 6 is cancelled.




- If you misdial, press the number(s) again.
- 5 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.

Cancelling a base unit

If another handset is out of range and/or its power is OFF when "Cancelling a Handset", the previous base unit number will still remain in the cancelled handset. Therefore, you need to cancel the base unit registered in the cancelled handset.

 - 1 Press **PROG**.
- 2 Press **▼** or **▲** until "F70" is displayed.
- 3 Press **OK**.
- 4 Enter the handset password (p. 27).
 - Registered base number(s) is(are) displayed.
Ex. Registered base units: 1, 2 and 4




- 5 Press the cancelling base unit number **1** to **4**.
 - The selected base unit number flashes.
- 6 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.

Selecting the Stand-by Mode Display

You can choose whether to display the currently connected base unit number, handset number or no display while in the stand-by mode. The factory preset is the base unit number.

 - 1 Press **PROG**.
- 2 Press **▼** or **▲** until "**F3 1**" is displayed, then press **OK**.
 - The current setting is displayed.
 - 1: Base unit number
 - 2: Handset number 0: No display



- 3 Press **▼** or **▲** to select the desired setting.
 - You can press **1**, **2** or **0** to select the setting.
- 4 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.
Ex. Handset number is selected.



Bell Selection

There are three choices for bell selection. When a call is being received:

- all handsets ring. "All handsets"
- the selected handset(s) ring(s). "Specified handset(s)"
- the selected handset rings first, then if it does not answer, all other handsets will ring. "First handset"

 
The factory preset is "All handsets". To change the bell selection, program as follows.

Selecting specified handset(s)


You can choose which handset(s) you want to ring.

- 1 Press **PROG** then **INT'**.
- 2 Press **1**.
- 3 Enter the base unit password (p. 27).
 - The current setting is displayed.
 - 1: All handsets
 - 2: Specified handset(s)
 - 3: First handset

Ex. All handsets is selected.



 - 4 Press **2**.
 - The current registered handset number(s) is/are displayed.
Ex. Handset 1, 2, 3, 4, 5 and 6 are registered.



- 5 Enter the handset number(s) you want to ring.
 - The selected handset number(s) flash(es).
 - If you misdial, press the number(s) again.
- 6 Press **PROG**.
 - A confirmation tone sounds and the display will return to the stand-by mode.

Selecting first handset

One handset will ring first, then all other handsets will ring if the first handset is not answered. You can choose which handset will ring first and the ring count (1 to 6) until all handsets ring. The factory preset is 3 rings.

1 Press **PROG** then **INT'**.

2 Press **1**.

3 Enter the base unit password (p. 27).

- The current setting is displayed.

1: All handsets

2: Specified handset(s)

3: First handset

 
4 Press **3**.

- The current registered handset number(s) is/are displayed.

5 Enter the handset number you want to ring.

- The selected handset number flashes.

Ex. Handset 4 is selected.




- If you misdial, press the number again.

6 Press **PROG**.

- The handset number is stored.
- The current ring count is displayed.

 Ex. Ring count 3 is selected.



7 Press a dialling button **1** to **6** to select the ring count.

8 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.
- Even if you select "Specified handset(s)" or "First handset", calls can also be received on the handsets which do not ring.

Selecting all handsets

When a call is received, all handsets will ring at the same time.

1 Press **PROG** then **INT'**.

2 Press **1**.

3 Enter the base unit password (p. 27).

4 Press **1**.

 
 

5 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.

Paging/Intercom

Paging All Handsets from the Base Unit





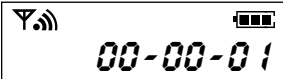

The base unit user can page all handsets.

- 1 Press .
 - All handsets will ring for 1 minute.
- 2 To stop paging, press  again or press  on one of the handsets.

Intercom between Handsets

A 2-way intercom is available between handsets.

Ex. Handset 1 is paging Handset 2.

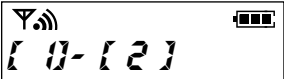- 1 Handset 1:
Press .
 - 2 Handset 1:
Enter the desired handset number.
 - “” is displayed and the paged handset rings.
 - 3 Handset 2:
When the unit rings, press  to answer.
 - The intercom duration is displayed.
 - 4 Handsets 1 and 2:
To end the intercom, press .
- Intercom calls can be conducted within the radio area of the current base unit, but not with units in neighbouring radio areas.



Transferring a Call from One Handset to Another

The intercom can be used during a call, enabling you to transfer a call between handsets registered to the same base unit.

Transferring a call using the intercom


Ex. Handset 1 is transferring a call to Handset 2.

1 Handset 1:

During a call, press **INT'**. Then enter the desired handset number.

- The call is put on hold.
- You will hear an internal ring back tone until the other handset is answered.
- If there is no answer, press **INT'** to return to the call.

2 Handset 2:

When the unit rings, press  to answer.

3 Transferring a call:

Handset 1:

Press .

- The transfer is completed.
Handset 2 can answer the call.

OR

Ending the intercom:

Handset 1:

Press **INT'**.


- Handset 1 returns to the call.

Transferring a call without the intercom

This feature enables you to transfer the call to another handset without waiting for the paged handset to answer.


Ex. Handset 1 is transferring a call to Handset 2.

1 Handset 1:


During a call, press **INT'** and enter the desired handset number. Then press  to transfer the call.

- The call is put on hold.

2 Handset 2:

When the unit rings, press  to answer the call.

- The transfer is completed.

- If the paged handset is not answered within 30 seconds, a ring tone sounds at the paging handset. The paging handset can return to the call by pressing .

Conference

During a call using the handset, you can make an intercom call to another handset and then combine the calls together to establish a conference call between handsets registered to the same base unit.

1 Handset 1:

During a call, press **[INT*]**. Then enter the desired handset number.

- The call is put on hold.
- If there is no answer, press **[INT*]** to return to the call.

2 Handset 2:

When the unit rings, press **[A]** to answer.

3 Handset 1:

Press **[3]** to establish a conference call.

4 Handset 1 or 2:

Press **[END]** to hang up the conference call.

Setting the Call Waiting Tone

If an incoming call has been received during an intercom between handsets, a call waiting tone sounds. You can choose whether or not this tone will sound. The factory preset is ON.

1 Press **[PROG]**.

 
2 Press **▼** or **▲** until “F24” is displayed.

3 Press **[OK]**.

- The current setting is displayed.

1: ON 0: OFF

Ex. ON



4 Press **▼** or **▲** to select the desired setting.

- You can press **[0]** or **[1]** to select OFF or ON.

5 Press **[PROG]**.

- A confirmation tone sounds and the display will return to the stand-by mode.

Replacing the Batteries



Selecting the battery type

Three Nickel cadmium (Ni-Cd) batteries are included with this unit. Nickel metal hydride (Ni-MH) rechargeable batteries can also be used. If you replace the batteries with Ni-MH batteries, you must set the battery type selection to "1", or the battery strength will not be displayed correctly. The factory preset is "0" (Ni-Cd).

1 Press **PROG**.

2 Press **▼** or **▲** until "**F33**" is displayed.

3 Press **OK**.

4 To select Ni-MH batteries, press **1**.

OR

 
To select Ni-Cd batteries, press **0**.

5 Press **PROG**.

- A confirmation tone sounds and the display will return to the stand-by mode.

- Incorrect battery type selection may shorten battery life.

Battery replacement

If "" flashes after a few telephone calls even when the handset batteries have been fully charged, it is time to replace the batteries with new ones. **Remember to charge the new batteries after replacement.**

1 Turn the power OFF to prevent memory loss (p. 12).

Remove the cover by sliding while pressing in the direction of the arrow, then take out the batteries.


2 Replace the batteries with new ones as shown.

- When you finish, close the handset cover and turn the power ON (p. 12).

3 Be sure to charge the new batteries fully in order to display the battery icon correctly (p. 11).

Ni-Cd battery: For about 4 hours.

Ni-MH battery: For about 8 hours.

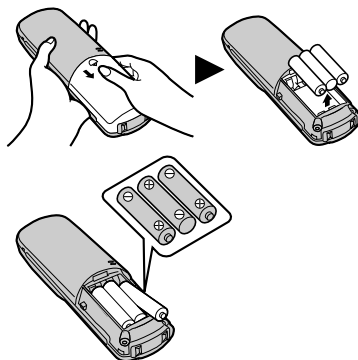

- Discard defective batteries as soon as possible. Defective batteries may leak into the unit.
- Please use only Panasonic P-03H or P-P03S batteries.
- If the rechargeable batteries are not inserted correctly, the handset will not work.
- Nickel metal hydride (Ni-MH) rechargeable batteries (AAA size) are available. Please use only Panasonic HHR-P03H batteries.
- Please return the rechargeable batteries to your sales shop at the end of their useful life.

➡ Replacing the Batteries



Caution:

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the batteries specified.
 2. Do not use non-rechargeable batteries.
 3. Do not mix old and new batteries.
 4. Do not dispose of the batteries in a fire. They may explode. Check with local waste management codes for special disposal instructions.
 5. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
 6. Exercise care in handling the batteries in order not to short the batteries with conductive materials such as rings, bracelets, and keys. The batteries and/or conductor may overheat and cause burns.
 7. Charge the batteries provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
- Read "Important Notice Concerning the Correct Use and Charging of Ni-Cd (Ni-MH) Batteries" on page 49.



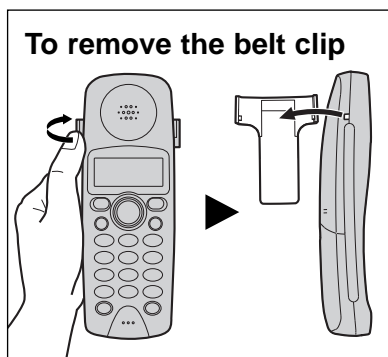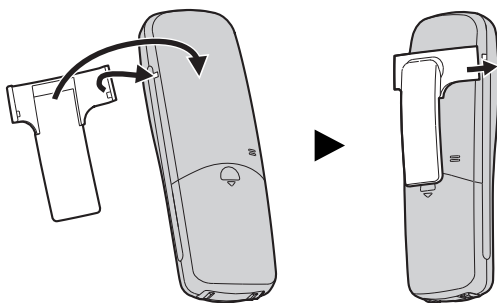

Using the Belt Clip

You can hang the handset on your belt or pocket using the belt clip.




 



Before Requesting Help




➔

Problem	Remedy
The unit does not work.	<ul style="list-style-type: none">• Turn the power ON (p. 12).• Check the settings (p. 9–15).• Charge the batteries fully (p. 11).• Clean the charge contacts and charge again (p. 11).• Unplug the AC adaptor and turn the power OFF to reset. Plug in the AC adaptor and turn the power ON. Then try again.• The handset has been cancelled or has not been registered. Register the handset (p. 35).• Re-install the handset batteries and try again.
“  ” flashes and an alarm tone sounds when you press  .	<ul style="list-style-type: none">• You are too far from the base unit. Move closer and try again.• Plug in the AC adaptor.
A busy tone sounds when you press  .	<ul style="list-style-type: none">• Another handset is in use.
You cannot dial.	<ul style="list-style-type: none">• Check that the dialling mode selection is correct (p. 13).• The unit is in call prohibition mode. Cancel the mode (p. 29).• The dialled number is restricted. Cancel the number (p. 30).• Key lock mode is set. Cancel the mode (p. 24).
“  ” flashes during a conversation and the call is disconnected.	<ul style="list-style-type: none">• The handset is out of range. Move closer to the base unit and make the call again.• Plug in the AC adaptor.
Static, sound cuts in/out, fades. Interference from other electrical units.	<ul style="list-style-type: none">• Locate the handset and base unit away from other electrical appliances (p. 5).• Move closer to the base unit.
The handset does not ring.	<ul style="list-style-type: none">• Turn the power ON (p. 12).• The ringer is set to OFF. Select the desired volume level (p. 14).
The base unit does not ring.	<ul style="list-style-type: none">• The ringer is set to OFF. Set to HIGH, MEDIUM or LOW (p. 15).




Before Requesting Help

Problem	Remedy
You cannot program function items such as the dialling mode.	<ul style="list-style-type: none">• Programming is not possible while the unit is in the talk or intercom mode.• Do not pause for over 60 seconds while programming.
You cannot store a phone number in memory.	<ul style="list-style-type: none">• You cannot store a phone number while the unit is in the talk or intercom mode.• Do not pause for over 60 seconds while storing.
While programming function items or storing numbers, the unit starts to ring.	<ul style="list-style-type: none">• To answer the call, lift the handset or press . Start again from the beginning after hanging up.
The unit does not display the caller's phone numbers.	<ul style="list-style-type: none">• Other telephone equipment may be interfering with your phone. Disconnect them and try again.• Other electrical appliances connected to the same outlet may be interfering with the Caller ID information. Telephone line noise may be affecting the Caller ID information.
 does not function.	<ul style="list-style-type: none">• The handset is too far from the base unit.• The handset is engaged in an outside call. Wait until the in use indicator () light goes out.
You cannot redial.	<ul style="list-style-type: none">• Access numbers entered after pressing  will not be included when redialling.• If the last number dialled was more than 24 digits long, the number will not be redialled.
The paged handset does not answer.	<ul style="list-style-type: none">• The handset is not in the same radio area.• The handset is engaged in an outside call.• The handset has been cancelled or has not been registered. Register the handset in the base unit (p. 35).
While using the intercom, two tones sound.	<ul style="list-style-type: none">• A call is being received. To answer, press  twice.
The unit misdials when connected to a PBX.	<ul style="list-style-type: none">• Check the pause function (p. 23).

Problem	Remedy
You cannot register the handset in the base unit.	<ul style="list-style-type: none"> • The base unit has registered a maximum of 6 handsets or the handset has registered a maximum of 4 base units. • A wrong base unit password was entered. Enter the correct password. • There is interference from other electrical units. Locate the handset and base unit away from them. • You must finish registration within 1 minute after the ringer tone sounds, or programming will be cancelled (p. 35).
The battery strength is not displayed correctly.	<ul style="list-style-type: none"> • Check that the battery type selection is correct (p. 43)
"  " flashes or the unit beeps every 15 seconds.	<ul style="list-style-type: none"> • Charge the batteries fully (p. 11).
You charged the batteries fully, but "  " flashes.	<ul style="list-style-type: none"> • Clean the charge contacts and charge again (p. 11). • Install new batteries (p. 43, 49).
The charge indicator () light never goes out while charging.	<ul style="list-style-type: none"> • This is normal.

✂

			
00	05	10	15
01	06	11	16
02	07	12	17
03	08	13	18
04	09	14	19

Safety Instructions

Take special care to follow the safety suggestions listed below.

Safety

- 1) The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit.
- 2) When the unit is not used, turn the power off. When left unused for a long period of time, the base unit should be unplugged from the household AC outlet.

Installations


Environment

- 1) Do not use this unit near water—for example, near a bathtub, washbowl, sink, etc. Damp basements should also be avoided.
- 2) The unit should be kept away from heat sources such as radiators, cookers, etc. It also should not be placed in rooms where the temperature is less than 5°C or greater than 40°C.

Placement

- 1) Do not place heavy objects on top of this unit.
- 2) Care should be taken so that objects do not fall onto, and liquids are not spilled into, the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.
- 3) Place the unit on a flat surface.

For best performance


- 1) If noise prevents the conversation from being understood at the handset, move toward the base unit to reduce the noise.
- 2) The handset should be used at the HIGH volume setting when it is difficult to hear the other party.
- 3) The handset should be fully recharged on the base unit when "  " on the display flashes.
- 4) The maximum calling distance may be shortened when the unit is used in the following places:
Near obstacles such as hills, tunnels, underground, near metal objects such as wire fences, etc.

WARNING:

TO PREVENT THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY TYPE OF MOISTURE.


Adding Another Phone

This unit will not function during a power failure. To connect a standard telephone on the same line, use a T-adaptor.

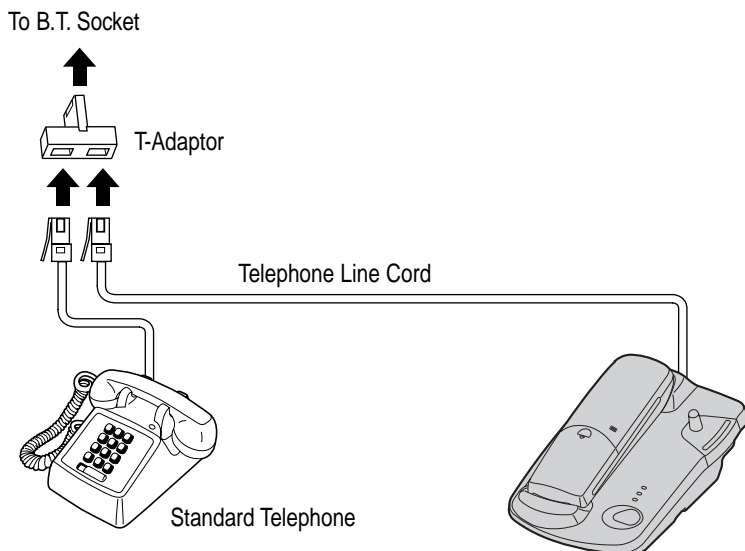

Important Notice Concerning the Correct Use and Charging of Ni-Cd (Ni-MH) Batteries

Batteries, due to their construction, undergo some wear and tear. The lifetime of a battery also depends on correct maintenance. Charging and discharging are the most important factors. You should take notice of the following to maintain the life of the battery as long as possible.

Ni-Cd (Ni-MH) batteries may experience a memory effect. If fully charged batteries are used several times only for 15 minutes in the handset and then recharged, the capacity of the batteries will be reduced to 15 minutes due to the memory effect. Therefore you should discharge the batteries completely, i.e. use them in the handset until “” on the display starts flashing. Then recharge them as described in the manual. After the memory effect has occurred, it is possible to achieve almost complete capacity of the Ni-Cd (Ni-MH) batteries by charging and discharging several times one after another.

Ni-Cd (Ni-MH) batteries can also self-discharge. This self-discharge depends on the ambient temperature. At temperatures under 0°C, the self-discharge will be the lowest. High humidity and high temperatures support the self-discharge. Also long-term storage will lead to self-discharge. A dead Ni-Cd (Ni-MH) battery should not be disposed of normally. They contain toxic heavy cadmium (metal hydride) and therefore should be recycled.

Dear purchaser,

You have acquired a KX-TCD952EB, which is a product made in regard with the European Standards for Cordless Telephones (DECT). DECT technology is characterised by high-security protection against interceptions as well as high-quality digital transmission.

This telephone was designed for a wide range of applications.

For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- operates up to 6 handsets at one base unit
- allows an intercom between 2 handsets
- allows the operation of a handset at up to 4 base units, expanding the communication radio area.

This telephone may be used for:

- operating several handsets
- operating at several base units
- connecting the base unit to a PBX.

Term Definitions

DECT

The abbreviation DECT means "Digital Enhanced Cordless Telecommunications".

Advantages of DECT

Excellent voice quality: Through sampling of digital signals DECT units obtain nearly noiseless transmission.

High grade tapping security: Based on digital transmission, DECT conversations are well protected against unapproved monitoring.

Multi-Handset operation: To operate several handsets at the base unit, no cable installation is required.

Interlink: Intercom conversation can be held free of charge between the registered handsets.

Functions like a PBX: More than one operation can be performed at the same time, like a PBX. eg., during an external call, an internal call or outside call can be transferred to another handset.

Multi-Base station operation: More than one handset can be registered to several base units, e.g., for private and office applications.

Equipment Manufacturer's Code (EMC)

For identification, this unit is prepared with an EM Code, which can be applied to future operators in mobile networks.

GUARANTEE

CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts thereof) repaired or replaced free of charge.

1. The appliance shall have been purchased and used solely within the UK and in accordance with standard operating instructions and the technical and/or Safety Standards required in the UK.
2. The appliance should be returned together with this guarantee and proof of date of purchase promptly on being found defective at the purchaser's risk and expense to the authorised dealer from whom the appliance was purchased or to the nearest authorised dealer. All enquires must be through such dealers.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this appliance is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the appliance or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to cassette tapes, batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these Operating Instructions with your receipt.

Panasonic Business Systems U.K.

Receipt No.	Date of Purchase
Model No. KX-TCD952EB	Serial No.



MODEL No.

KX-TCD952EB

Manufacturers Declaration:

This product is in conformity with the essential requirements of the 'R&TTE Directive 1999/5/EC'.



1999/5/EC

Customer Care Helpline Tel. No.: 08701 578577

Sales Department:

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Manufacturer:

Kyushu Matsushita Electric (U.K.) Ltd.

Pencarn Way, Duffryn, Newport, South Wales, NP10 8YE, United Kingdom